




 
## **ADDENDUM to Basic Users Guide to Audio Visual at Heswall Hall**

### **Radio Microphone Battery Indicators**

Having switched 'On' the microphone and seen the figures arrive in the Display, in a further 10 seconds (approx) a small 'battery indicator' will arrive in the display. This has three sections.

 Battery Full

 Battery OK

 Probably good idea to change battery.

**Or**

With the Microphone not in 'Mute' condition, wait for approx 15 secs and then the battery condition will appear on the right hand side of the Radio Mic Receiver display.

This latter is probably a more accurate indicator and should be checked before each session use of the Microphone.

Spare Batteries in the lower of the two Audio drawers.